
INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
2. Disconnect power before performing work on electrical equipment.
3. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
4. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
5. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
6. The use of accessory equipment not recommended by BeLuce Canada Inc., may cause an unsafe condition, and will void the unit's warranty.
7. Do not use this equipment for other than its intended purpose.
8. Servicing of this equipment should be performed by qualified service personnel.
9. **SAVE THESE INSTRUCTIONS!**

INSTALLATION

SURFACE MOUNTING


1. Open the unit by unscrewing the two (2) lens screws.
2. Peel the backing from the surface gasket. Position and stick the gasket to the back on the mounting plate.
3. Mount the unit securely to the junction box ensuring gasket seal.
4. Connect DC for 6V, 12V or 24V DC service.
5. Position lamps to provide best lighting distribution. Manually rotate or twist lamp to desired position.
6. Close lens and secure with (2) screws, hand tighten is recommended and maximum torque is 6 inch lbs (0.7 N m).

MAINTENANCE

1. Clean lens on a regular basis.

NOTE: The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by BeLuce Canada Inc., may cause equipment failure and will void the warranty.

Figure 1

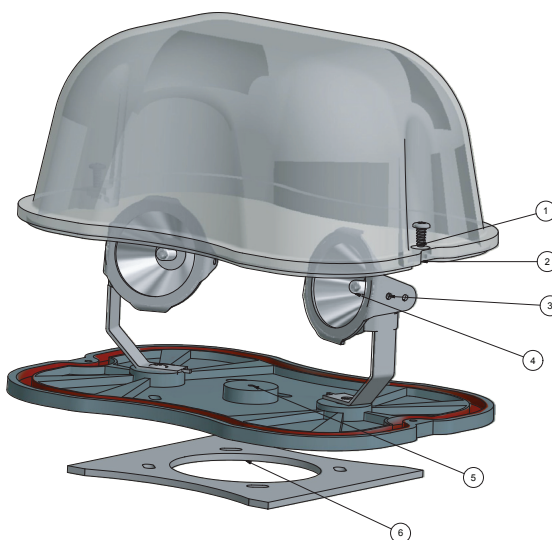

PARTS LIST

1. Lens Screw
2. Lens
3. MR16 Lamp Holder
4. MR16 LAMP
5. Mounting Plate
6. Mounting Gasket