

## INSTRUCTIONS

### IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
2. Disconnect power before performing work on electrical equipment.
3. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
4. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
5. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
6. The use of accessory equipment not recommended by BeLuce Canada Inc., may cause an unsafe condition, and will void the unit's warranty.
7. Do not use this equipment for other than its intended purpose.
8. Servicing of this equipment should be performed by qualified service personnel.
9. **SAVE THESE INSTRUCTIONS!**

## INSTALLATION

### STRAP MOUNTING

1. Knock out  $\frac{7}{8}$ " power entry hole on top of unit.
2. Mount the unit securely into place. Install four (4) screws. Fasten each strap with an appropriately sized screw or mounting bolt (not supplied) through each hole and into the mounting surface/wall. Each fastener must be securely in place to properly support the unit.
3. Open the unit by unscrewing the two (2) lens screws and (2) cover screws. Let cover assembly hang on tether.
4. Install conduit bushing.
5. Connect DC for 6V, 12V or 24V DC service.
6. Close cover and secure cover screws.
7. Position lamps/heads to provide best lighting distribution. Manually rotate or twist head to desired position.
8. Close lens and secure with (2) screws.

### JUNCTION BOX MOUNTING

1. See 1, 3, 4 above.
2. Knock out appropriate mounting hole in back of base.
3. Install gasket over mounting holes.
4. Mount base to junction box.
5. See 5 – 8 above.


## MAINTENANCE

1. Clean lens on a regular basis.

NOTE: The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by BeLuce Canada Inc., may cause equipment failure and will void the warranty.

### PARTS LIST

1. Lens
2. Cover
3. Base
4. MR16 Lamp Holder
5. MR16 LAMP
6. Gasket
7. Mounting Strap

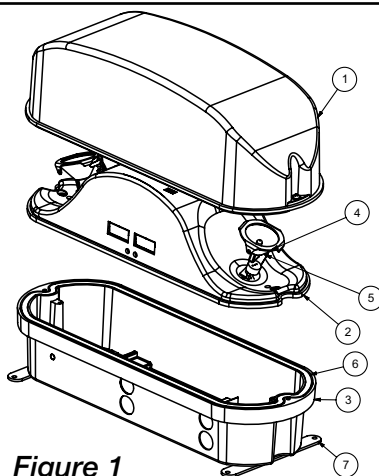

For mounting height information on different luminaire configurations, visit [www.beghellicanada.com/\\_assets/downloads/mounting-height-guide.pdf](http://www.beghellicanada.com/_assets/downloads/mounting-height-guide.pdf)

Figure 1