
INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
 2. Disconnect power before performing work on electrical equipment.
 3. Do not use outdoors.
 4. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
 5. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
 6. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
 7. The use of accessory equipment not recommended by BeLuce Canada Inc. as it may cause an unsafe condition, and will void the unit's warranty.
 8. Do not use this equipment for other than its intended purpose.
 9. Servicing of this equipment should be performed by qualified service personnel.
 - 10. SAVE THESE INSTRUCTIONS!**
-

INSTALLATION

WALL MOUNT - SINGLE FACE:

1. Extend unswitched 24 hour AC supply of rated voltage to junction box or appropriate wiring (supplied by others). Leave at least eight (8) inches of slack wire. The circuit should not be energized at this time.
2. Open the exit sign faceplate by inserting the tip of a screwdriver into the gap between the faceplate and the exit frame, near the top of the exit. Slowly twist the screwdriver until the faceplate releases (Figure 1).
3. Pull the hinged faceplate down and out (Figure 2).
4. Remove the exit sign universal canopy kit from inside the exit (if located there).
5. Knock out the appropriate mounting pattern and/or wire pass-thru hole on the exit back plate to fit the junction box or wiring connector being used (supplied by others).
6. Bring wires through the back of the sign and mount the exit securely in place. Screw directly to junction box if possible.
7. Connect AC supply per diagram provided (Figure 5). Insulate unused wire!
CAUTION! - Failure to insulate unused wire may result in a shock hazard or unsafe condition as well as equipment failure.
8. Route wires and secure them in place.
9. Remove any directional chevron arrows to be indicated as required from the exit stencil. You may have to remove the red fibre first.
10. Insure that the faceplate strike catches remain at 90°. If strikes have been deformed then the faceplate will not hold securely. Bend both strikes back to 90° if necessary (Figure 3).
11. Replace the red exit fibre (if removed) and press the faceplate back into the exit frame until securely latched.
12. Turn on the AC voltage supply.

CEILING/END MOUNT - SINGLE OR DOUBLE FACE:

1. Follow steps 1 to 4 of Wall Mounting instructions above.
2. On the top and both sides of the exit there are three (3) holes for the canopy - two (2) for the mounting screws and one (1) wire pass-thru hole. Knock out the three appropriate canopy mounting holes for your installation.
3. Secure the canopy to the exit sign using the supplied 1 inch screws and washer nuts and align the wire pass-thru hole in the frame to the wire pass-thru hole in the centre of the canopy.
4. Bring wires through the wire pass-thru and connect AC supply as described in step 7 of Wall Mounting instructions above.
5. Secure the exit to the wall or ceiling using the supplied 1-1/2 inch screws and nuts. Screw directly to junction box if possible. A universal spider plate is supplied to allow for exit sign placement adjustment or connection to a variety of electrical boxes (Figure 4).
6. Follow steps 8 to 12 of Wall Mounting instructions above.

SELF-POWERED:

1. For models FME-SP, plug the battery into the circuit board per (Figure 5) self-powered sign.

Figure 1

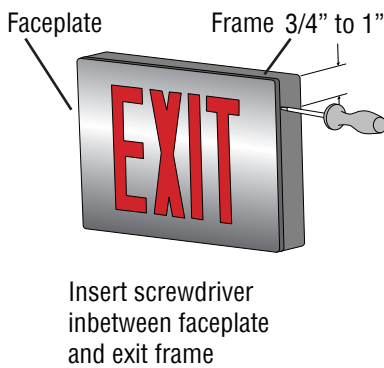


Figure 2

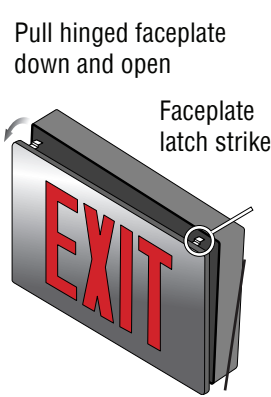


Figure 3

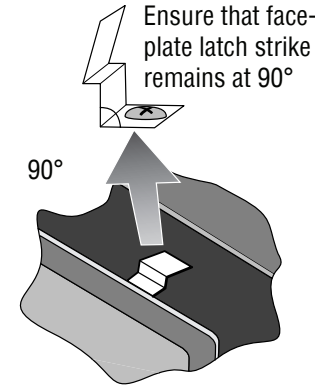


Figure 4


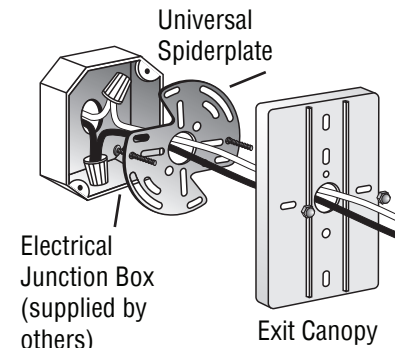


Figure 5

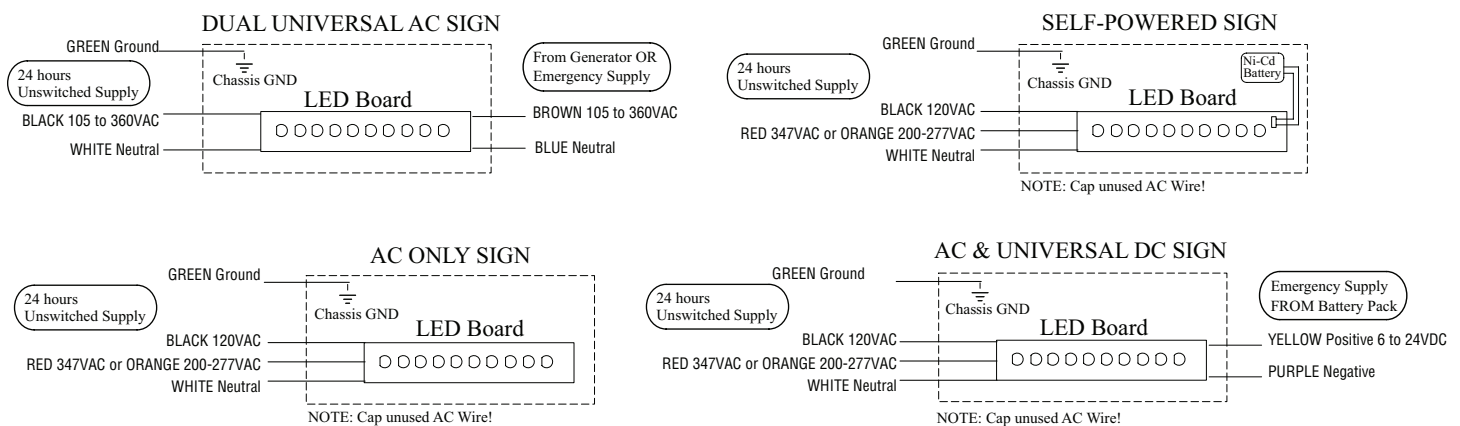

MAINTENANCE

- Code requires that the equipment be tested every 30 days for 30 seconds, and that written records be maintained. Further, the equipment is to be tested once a year for the duration required as per Code. The equipment is to be repaired whenever the equipment fails to operate as intended during the duration test. Written records of test results and any repairs made must be maintained. BeLuce Canada Inc. strongly recommends compliance with all Code requirements.
 - Clean exit face(s) on a regular basis.
- NOTE:** The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by BeLuce Canada Inc., may cause equipment failure and will void the warranty.

TROUBLESHOOTING

EXIT SIGN DOES NOT COME ON AT ALL

- Check AC supply and all AC connections - be sure exit has 24 hour AC supply (unswitched).
- Check supply voltage and AC connections. The AC supply must be at least 80% of nominal (96V on a 120V line) for equipment to function normally. At lower voltages the LEDs will begin to glow dimly until the source voltage drops below the full "turn-on" point.

NOTE: This condition may also be caused by incorrectly connecting a 120 Volt supply line to the 277-Volt capacitor assembly lead.

- AC supply is OK ; replace LED circuit board assembly

SAVE THESE INSTRUCTIONS