



# VANDAL RESISTANT REMOTE (VR)

---

## INSTRUCTIONS

### IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
2. Disconnect power before performing work on electrical equipment
3. Do not use outdoors
4. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
5. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
6. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
7. The use of accessory equipment not recommended by BeLuce Canada Inc., may cause an unsafe condition, and will void the unit's warranty.
8. Do not use this equipment for other than its intended purpose.
9. Servicing of this equipment should be performed by qualified service personnel.
10. **CAUTION:** Halogen lamps may be used in this equipment. Dispose of lamp with care. To avoid shattering: Do not use lamp in excess of rated voltage, protect lamp against abrasion, scratches and against liquids when lamp is operating. Halogen lamps operate at high temperatures: Do not store or place flammable materials near lamp.
11. **SAVE THESE INSTRUCTIONS!**

---

## INSTALLATION

(See Figure 1): VR UNIT

1. Loosen the two (2) screws (top and bottom) on the front cover / cube and then remove the cube cover.
2. Mount the Vandal Resistant remote securely in place using the keyhole slots or knockouts provided on the rear of the steel mounting plate (screws not supplied).
3. The enclosures wiring harness exits from the back of the steel mounting plate.
4. Connect DC for 6V, 12V , 24V or 120V DC service.
5. Route all wires and secure them in place
6. Position lamps/heads to provide best lighting distribution (this is a tool-less operation)
7. Replace the cover and tighten the two screws.

---

## MAINTENANCE

1. Clean lenses on a regular basis.  
NOTE: The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by BeLuce Canada Inc., may cause equipment failure and will void the warranty.

---

*Figure 1*

