



# WEATHERPROOF REMOTE (WR)

## INSTRUCTIONS IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
2. Disconnect power before performing work on electrical equipment
3. Do not use outdoors
4. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
5. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or eyes, flush with fresh water and contact a physician immediately.
6. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
7. The use of accessory equipment not recommended by BeLuce Canada Inc., may cause an unsafe condition, and will void the unit's warranty.
8. Do not use this equipment for other than its intended purpose.
9. Servicing of this equipment should be performed by qualified service personnel.
10. CAUTION: Halogen lamps may be used in this equipment. Dispose of lamp with care. To avoid shattering: Do not use lamp in excess of rated voltage, protect lamp against abrasion, scratches and against liquids when lamp is operating. Halogen lamps operate at high temperatures: Do not store or place flammable materials near lamp.
11. **SAVE THESE INSTRUCTIONS!**

## INSTALLATION


(See Figure 1): WR UNIT

1. Loosen the four (4) plastic screws (one in each corner) on the front cover / faceplate and then remove the cover.
2. Mount the Weatherproof Remote securely in place (screws not supplied).
3. Drill appropriate sized hole(s) in the enclosure for electrical conduit entrance. Use a rated watertight conduit hub(s) to connect the conduit to the enclosure to maintain Nema 4/4X integrity.
4. Pass power wires through previously drilled holes(s) and connector(s).
5. Connect DC for 6V, 12V,, 24V or 120V DC service.
6. Route all wires and secure them in place
7. Position lamps/heads to provide best lighting distribution (this is a tool-less operation)
8. Replace the cover and tighten the four screws.


## MAINTENANCE

1. Clean lenses on a regular basis.  
NOTE: The servicing of any parts should be performed by qualified service personnel only. The use of replacement parts not furnished by BeLuce Canada Inc., may cause equipment failure and will void the warranty.

*Figure 1*

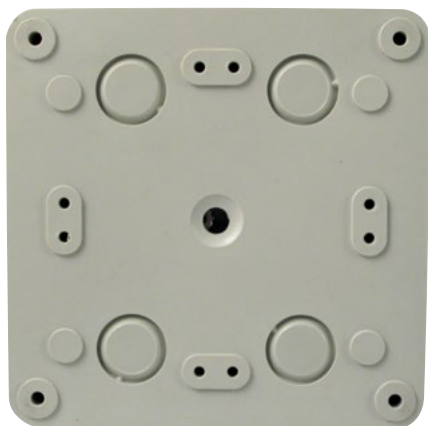

WR Single

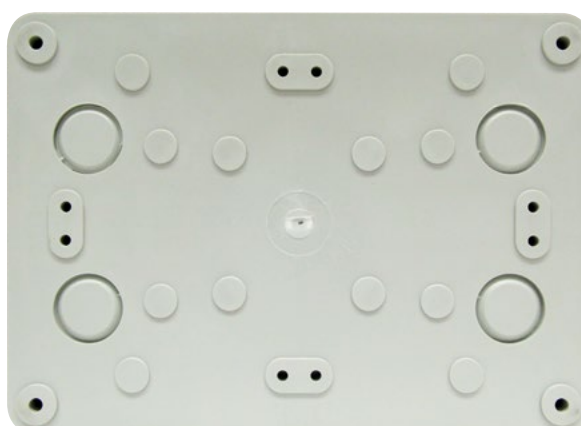

WR Double