



ZONE SENSING PANEL (ZSP)

INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS**
2. Disconnect power before performing work on electrical equipment.
3. Do not use outdoors.
4. Do not let power cords touch hot surfaces and do not mount near gas or electric heaters.
5. Equipment should be mounted in locations and at heights where unauthorized personnel will not readily subject it to tampering.
6. The use of accessory equipment not recommended by BeLuce Canada Inc. as it may cause an unsafe condition, and will void the unit's warranty.
7. Do not use this equipment for other than its intended purpose.
8. Servicing of this equipment should be performed by qualified service personnel.
- 9. SAVE THESE INSTRUCTIONS!**

INSTALLATION

1. Secure the zone sensing panel to your wall or mounting surface.
2. Open the unit by pulling on the cabinet door (Figure 1). The hinged front cover can then be swung open and pulled back, out of the way.
3. The cabinet supplied will be similar to that shown in (Figure 1) and may change slightly depending on the voltage of the unit purchased.
4. Route wires into the cabinet utilizing the appropriate conduit and hub (supplied by others) to the terminal blocks. Refer to (Figure 3) for typical connection or (Figure 4) for user-assigned DC Zones.
5. All connections are made within the ZSP utilizing heavy duty large gauge terminal blocks.
6. Make proper wiring connections within the cabinet as per diagram supplied (Figure 2)
7. Route wires and secure in place.
8. The cabinet purchased should not have AC power turned ON until on-site regulatory approval has been completed.

Figure 1

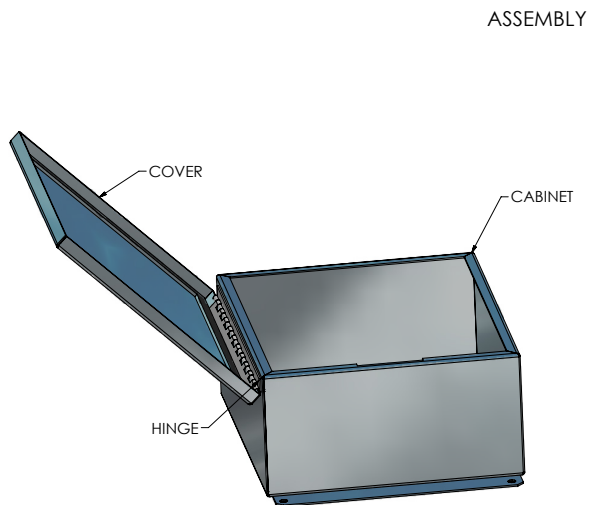


Figure 2

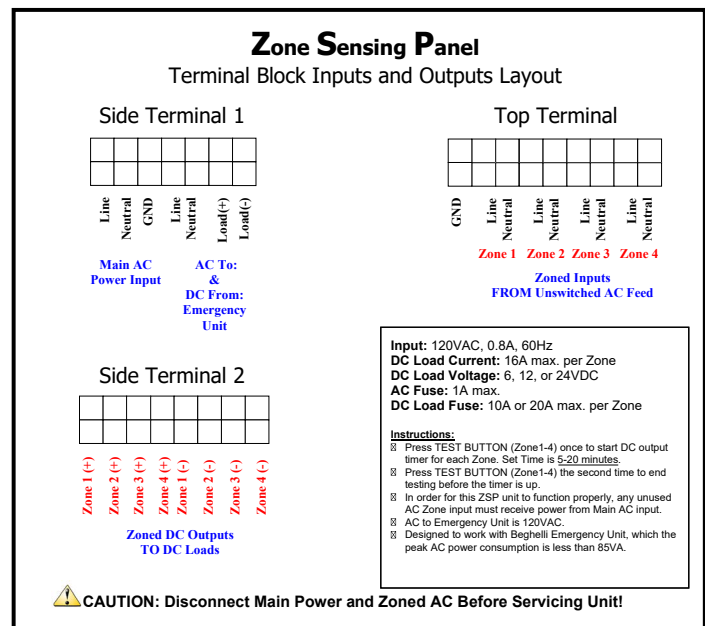


Figure 3

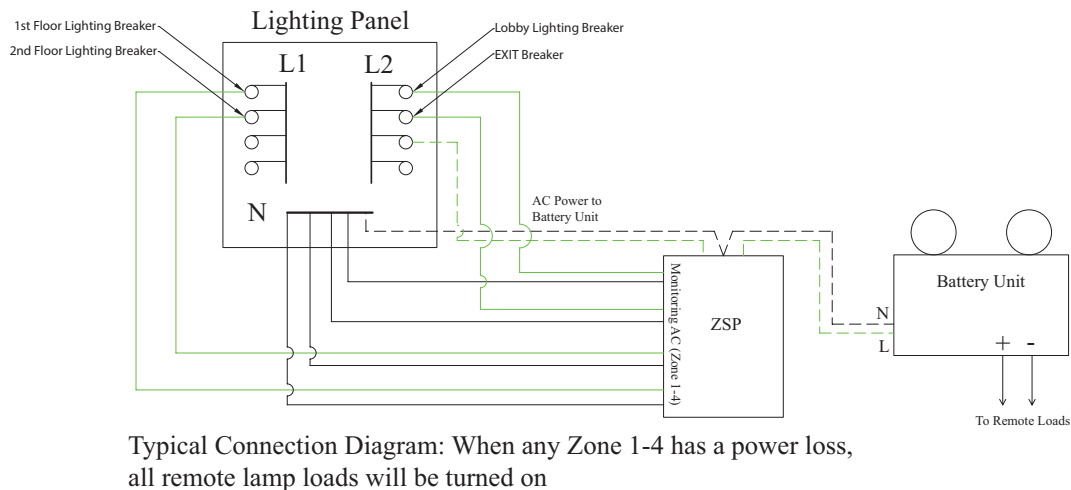


Figure 4

