

HAZ-X 0


HAZARDOUS LOCATION LED

- HZX-EX-02:
15W/20W/25W/30W/35W/40W



EACH MODEL NUMBER CONSISTS OF THE FOLLOWING:
SERIES / OPERATION / COLOUR TEMPERATURE / INPUT

SERIES	HZX-EX-02
OPERATION	AC ONLY, EMERGENCY BACKUP OPTIONAL
COLOUR TEMP	2000K, 3000K, 4000K, 5000K, 5700K, 6500K, RED, GREEN
INPUT VOLTAGE	120-347V, 120-277V

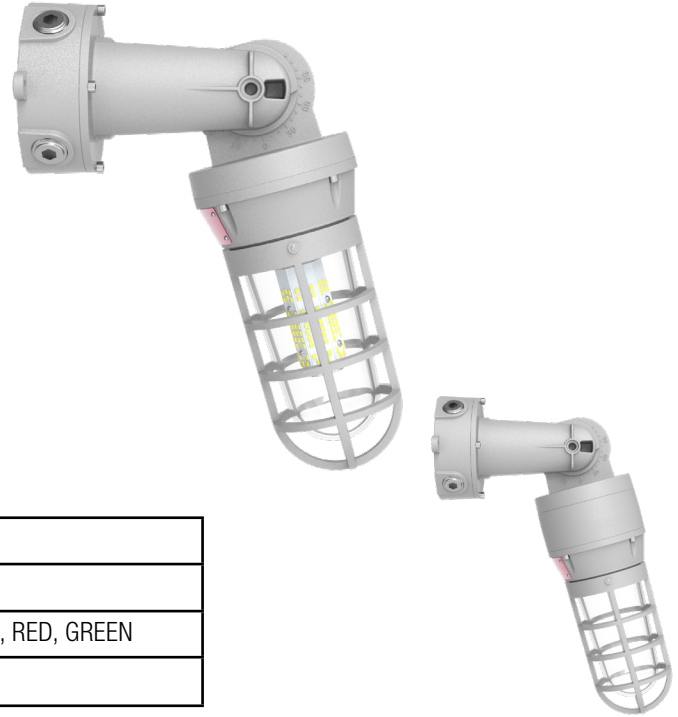

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Read these instructions carefully before installation and save them for future reference.
2. Fixtures must be wired in accordance with the national electrical code and all applicable local codes. Proper grounding is required for safety.
3. This product must be installed in accordance with the applicable installation code by a qualified electrician who is familiar with the construction and operation of the product and the hazards involved.

SAVE THESE INSTRUCTIONS!

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

Before installation, turn power off.

WARNING: Risk of fire or electric shock. Hazardous light installation requires knowledge of luminaires and electrical systems. If not qualified, DO NOT try to install. Please contact an electrician.

WARNING: Risk of fire or electric shock. Suitable for wet locations. Make sure the power is off prior to install.

WARNING: Risk of fire or electric shock. Suitable for non-insulated surface and frame. DO NOT cover fixture with insulation liner or similar material.

WARNING: To reduce the risk of ignition of hazardous atmospheres, disconnect the luminaire from the AC supply circuit and determine that the area is free of ignitable concentration before opening. Keep tightly closed when in operation.

WARNING: DO NOT install in unstable, loose, or breakable surfaces.

WARNING: DO NOT let objects impact or exert force on the surface of the fixture.

WARNING

No user serviceable parts. Refer service to a qualified service technician. Read instructions prior to installing and/or operating this device. Installation should be performed by a licensed electrician/installer in accordance with local codes.

INSTALLATION AND ELECTRICAL CONNECTION

1- The specific steps of installation (Ceiling Mount)

(Note: Measurements are in inches [mm])

STEP 1: Use appropriate mounting tool (wrench or screwdriver, not provided). Mark the mounting surface for mounting hardware locations and drill two holes (8 mm diameters) in the locations. Recommended distance is 5.71 inch (145 mm). See Fig. 1.

STEP 2: Open the upper cover of the lamp with an Allen wrench, and connect the L/G/N/DIM+/DIM- indicated by the lamp terminal to the wire.

STEP 3: Use appropriate UL-rated wire connectors as required by code to make electrical connections. Follow appropriate mounting and wiring instructions per code; see wiring diagram Fig. 2.




Note: connect the AC cables as follows:

Green to grounding, White to Null, Black to Live (optional: Purple to DIM+, Pink to DIM-). Then tighten the upper cover back.

STEP 4: Match the luminaire's holes with the marked holes in the mounting surface. Utilize M8 expanded screws (not included in the package) to fix the nuts and secure the luminaire to the ceiling.

STEP 5: Turn on power to test whether the light works.

STEP 6: Installation completed (Fig. 4).

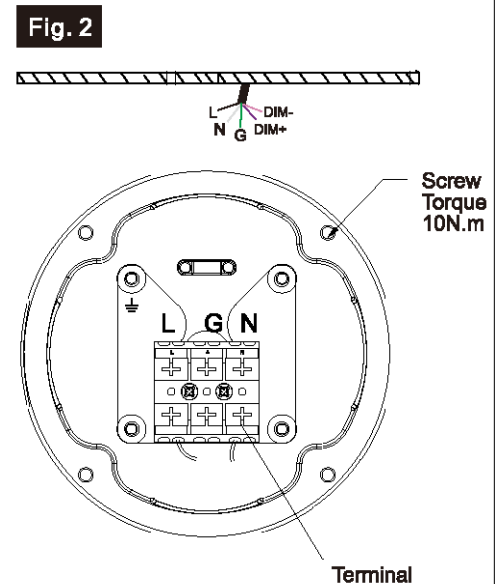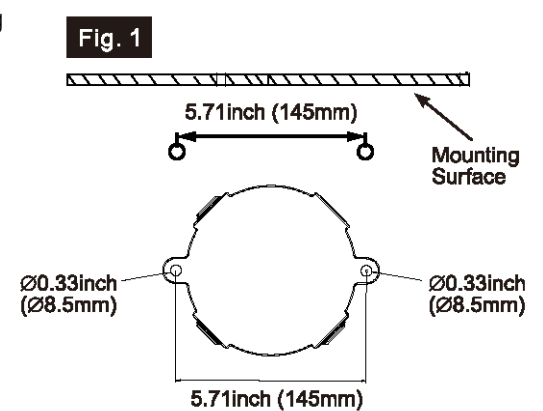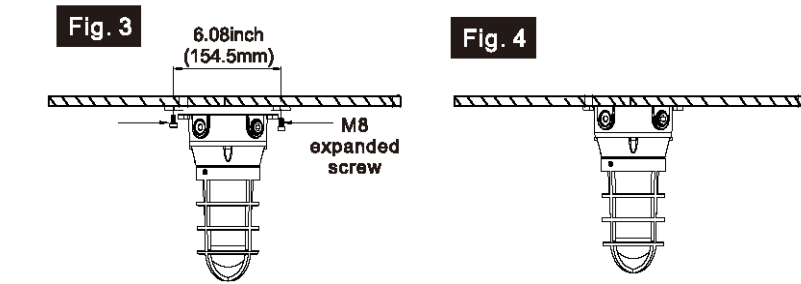


2- The specific steps of installation (Pole Mount)


(Note: Measurements are in mm)

STEP 1: Get ready the HZX-EX-02 fixture and a 3/4" NPT pole (the pipe is not included in the package). See Fig. 5.

STEP 2: Fix the 3/4" NPT pole to the ceiling adaptor (Fig. 6). Torque of 3/4" NPT: 525 N/M max.

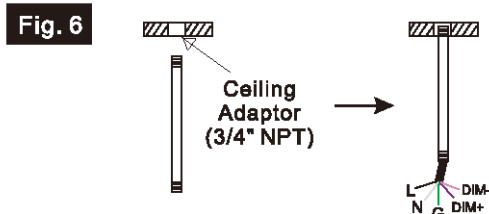

Insert the wires into one end of the pole and draw it out from the opposite end

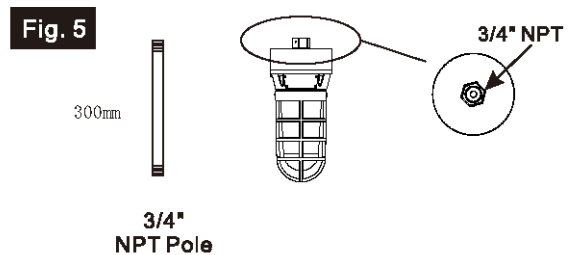

STEP 3: Use an Allen key to open the upper cover of the fixture by loosening the four setting screws on the cover sides (screw torque 10 N/M) to make electrical splices to fixture leads. Follow appropriate mounting and wiring instructions per code; see wiring diagram Fig. 7.

Note: Connect the AC cables as follows – Green to grounding, White to Null, Black to Live (optional: Purple to DIM+, Pink to DIM-). Then tighten the upper cover back.

STEP 4: Install the fixture to the pole and tighten it.

STEP 5: Turn on power to test whether the light works.

STEP 6: Installation completed (Fig. 8).

Fig. 8





Fig. 7

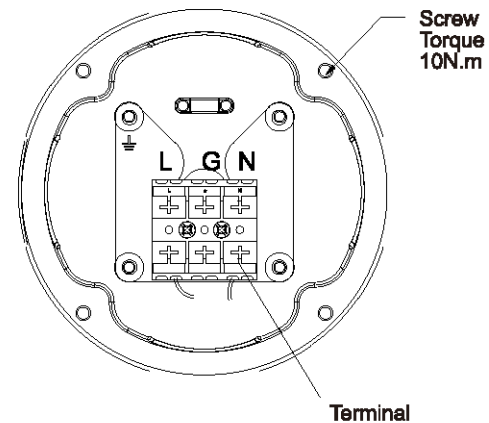

3- The specific steps of installation (Rotating Arm Mount)

(Note: Measurements are in inches [mm])

STEP 1: Drill two holes (8 mm diameters) in the wall for expanded screws and install M8 expanded screws (not included in the package) into the wall. Recommended distance between the two holes is 5.71 inch (145 mm). See Fig. 5.

STEP 2: Use an Allen key to open the upper cover of the fixture by loosening the four setting screws on the cover sides (screw torque 10 N/M) to make electrical splices to fixture leads. Follow appropriate mounting and wiring instructions per code; see wiring diagram Fig. 6.

Note: Connect the AC cables as follows – Green to grounding, White to Null, Black to Live (optional: Purple to DIM+, Pink to DIM-). Then tighten the upper cover back.

STEP 3: Match the luminaire to the bolt and tighten the nut. See Fig. 7.

STEP 4: Turn on the power to test whether the light works.

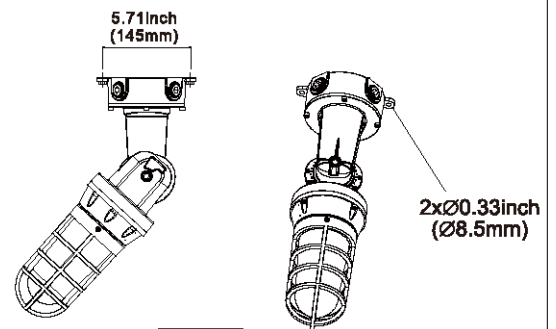


Fig. 5

Fig. 7

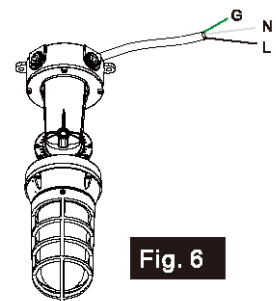
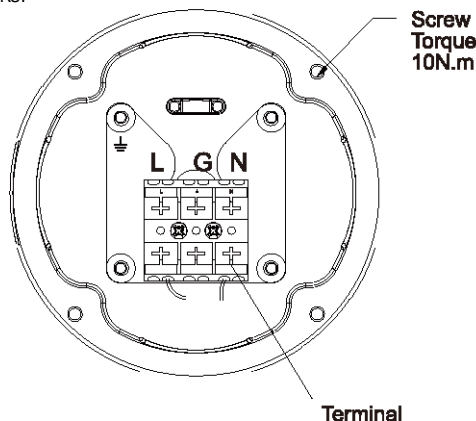
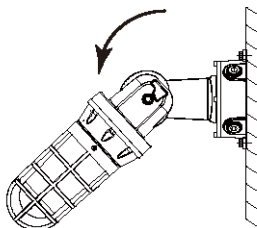


Fig. 6

4- The specific steps of installation (Wall Mount - 90°)

(Note: Measurements are in inches [mm])

STEP 1: Drill two holes (8 mm diameters) in the wall for expanded screws and install M8 expanded screws (not included in the package) into the wall. Recommended distance between the two holes is 5.71 inch (145 mm). See Fig. 9.

STEP 2: Use an Allen key to open the upper cover of the fixture by loosening the four setting screws on the cover sides (screw torque 10 N/M) to make electrical splices to fixture leads. Follow appropriate mounting and wiring instructions per code; see wiring diagram Fig. 10.

Note: Connect the AC cables as follows – Green to grounding, White to Null, Black to Live (optional: Purple to DIM+, Pink to DIM-). Then tighten the upper cover back.

STEP 3: Align the mounting hole of the lamp with the marked hole on the mounting surface, and tighten the nut with an M8 expansion screw (not included in the package) to fix the lamp to the wall, as shown in Fig. 11.

STEP 4: Turn on the power to test whether the light works.

STEP 5: Installation completed.

Fig. 9

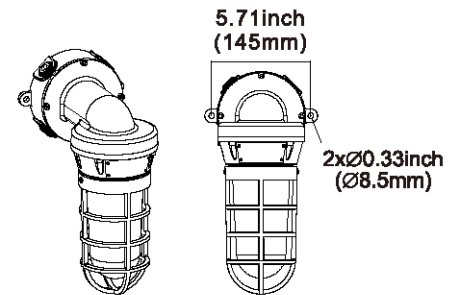


Fig. 10



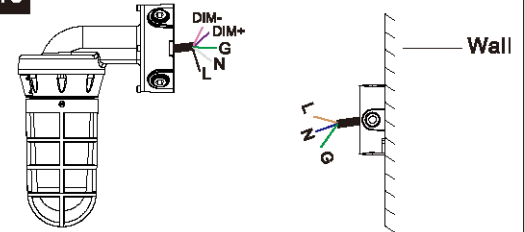


Fig. 11

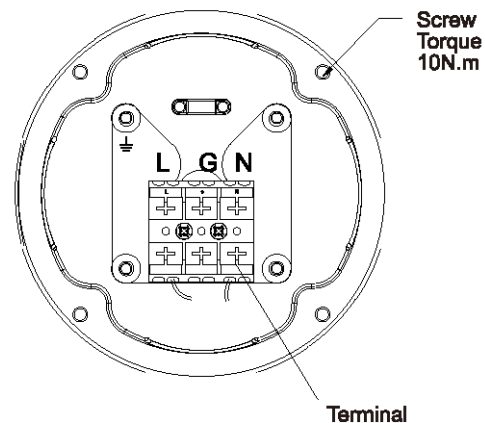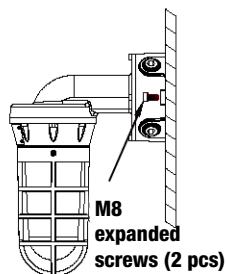

HAZ-X IN02-A-A

HAZARDOUS LOCATION MICROWAVE SENSOR

- HZX-EX-IN02-A-A:
Motion and Photocell Sensor



EACH MODEL NUMBER CONSISTS OF THE FOLLOWING:
SERIES / OPERATION / COLOUR TEMPERATURE / INPUT

SERIES	HZX-EX-IN02-A
OPERATION	AC ONLY
INPUT VOLTAGE	120-277V



IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Read these instructions carefully before installation and save them for future reference.
2. Fixtures must be wired in accordance with the national electrical code and all applicable local codes. Proper grounding is required for safety.
3. This product must be installed in accordance with the applicable installation code by a qualified electrician who is familiar with the construction and operation of the product and the hazards involved.

SAVE THESE INSTRUCTIONS!

RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

Before installation, turn power off.

WARNING: Risk of fire or electric shock. Hazardous light installation requires knowledge of luminaires and electrical systems. If not qualified, **DO NOT** try to install. Please contact an electrician.

WARNING: To prevent product malfunction and / or electrical shock, this product must be properly grounded.

WARNING: Use only cUL approved wire for input/output connections. Minimum size 18 awg or 14 awg for continuous runs. Supply conductors must be rated to min 90 °C

WARNING: Use caution when handling this product during or after operation as it may become hot and cause burns. Disconnect product and allow cooling prior to servicing.

WARNING: Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.

WARNING: To reduce the risk of ignition of hazardous atmospheres, disconnect the luminaire from the AC supply circuit and determine that the area is free of ignitable concentration before opening. Keep tightly closed when in operation.

WARNING: Do not disconnect while the circuit is live or unless the area is free of ignitable concentrations.

WARNING: Suitable to install in a hazardous atmosphere, except where the ambient temperature exceeds the rated operating temperature of the fixture. This sensor is designed to operate in ambient temperatures ranging from -25°C to +60°C and is rated for wet locations.


WARNING: Altitude: for use in hazardous locations up to 2000m or 80 kpa(0.8bar).

WARNING


No user serviceable parts. Refer service to a qualified service technician. Read instructions prior to installing and/or operating this device. Installation should be performed by a licensed electrician/installer in accordance with local codes.

COMPATIBLE HAZ-X PRODUCTS

Devices are suitable for use in Class I, Division 2, Groups A, B, C, D, or non-hazardous locations only.

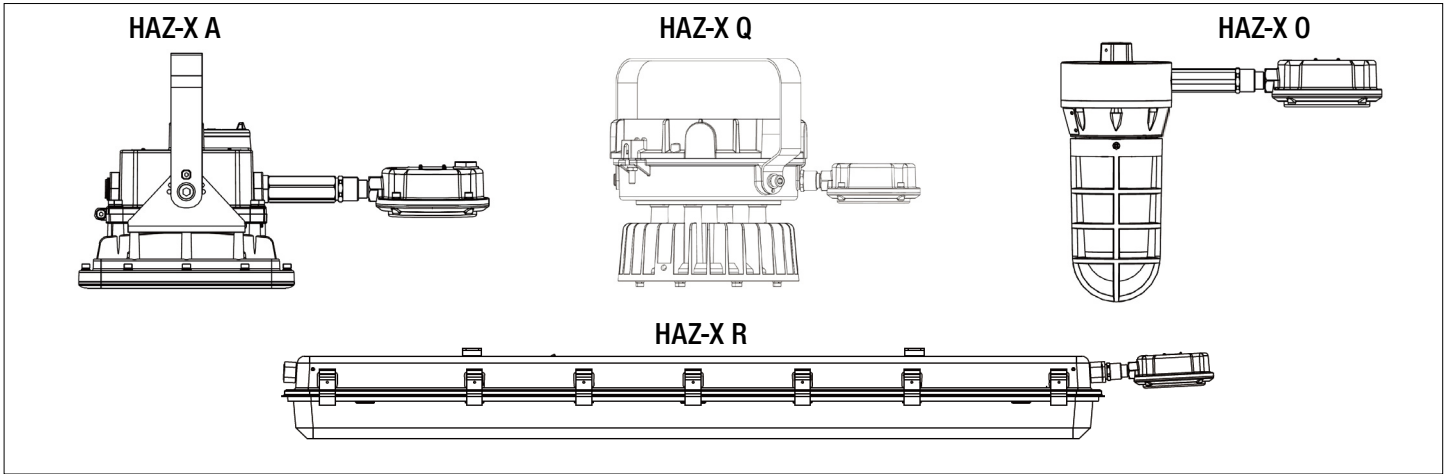


LIST OF PARTS INCLUDED

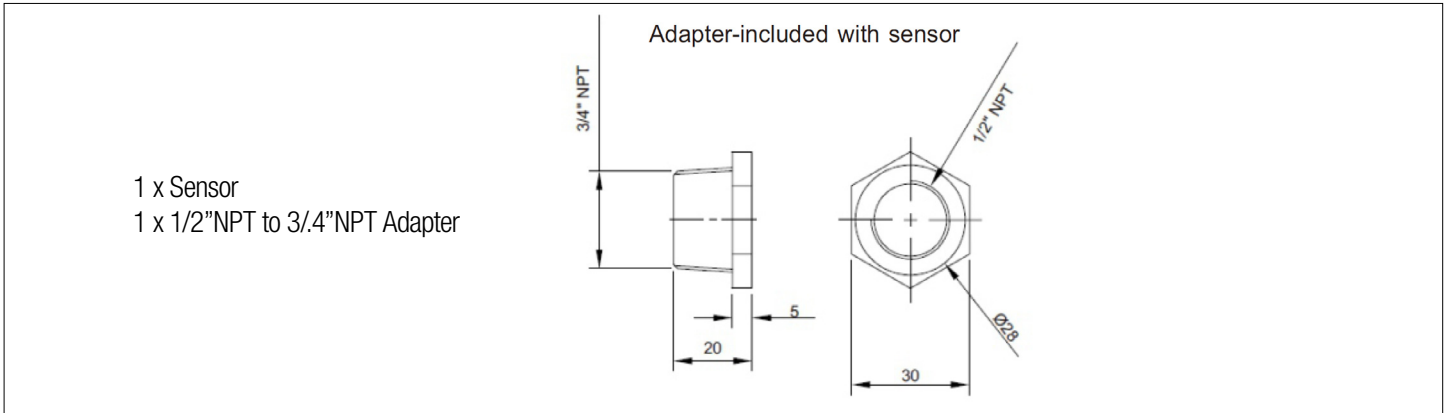


INSTALLATION AND ELECTRICAL CONNECTION

Fig: 1

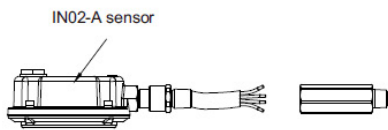


1. Thread the cables in the order shown in the figure.
NOTE: Increase the number of NPT1/2 reducers based on the actual installation of luminaires.

Fig: 2

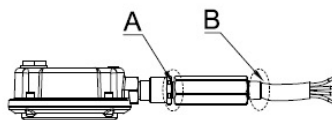

2. Fill the junction of area A and B with sealant after installation

Fig: 3




3. Select the appropriate inlet on the luminaire for connection: Black to Input L, White to Input N, Red to Output L', Green to Output N

NOTE: (a) After installation, area C should not be obstructed by any objects and should face towards detected area. (b) Do not place the sensor close to high-density objects such as metal, glass, mixed-use walls, etc. for the sensor may be triggered by mistake. (c) Please ensure that there are no moving signals around the sensor, such as fans, DC motors, sewers, air outlets, etc. for the sensor may generate false triggers.

Fig: 4

4. Install the components in the above steps on the explosion-proof lamps.

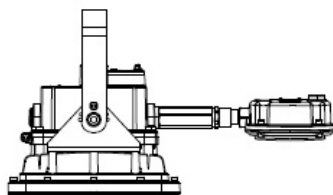


SENSOR FACTORY SETTINGS (Microwave)


- Brightness: 100%
- Hold Time: 20 Minutes
- Daylight: Disabled
- Sensitivity: 100%
- Stand-by Dimming Level: 20%
- Stand-by Time: 1 Minute

SENSOR WIRING DIAGRAM

Model with dimming function

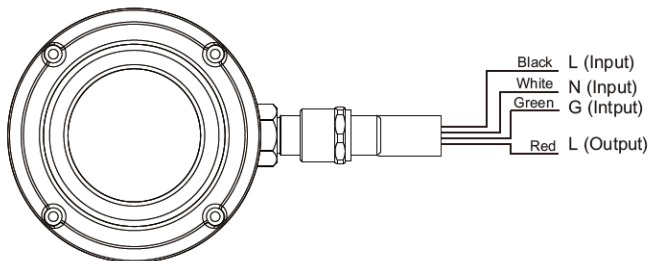


Model without dimming function

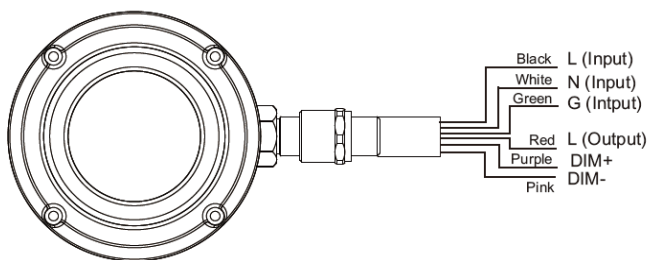


ACCESSORIES (sold separately)

Single Extension Accessory

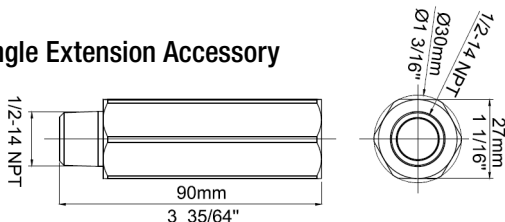

Reducer 1_2NPT/1_2NPT
Material: SUS304
Weight: 0.277kg


Double Extension Accessory

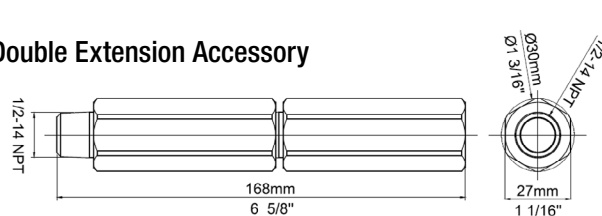







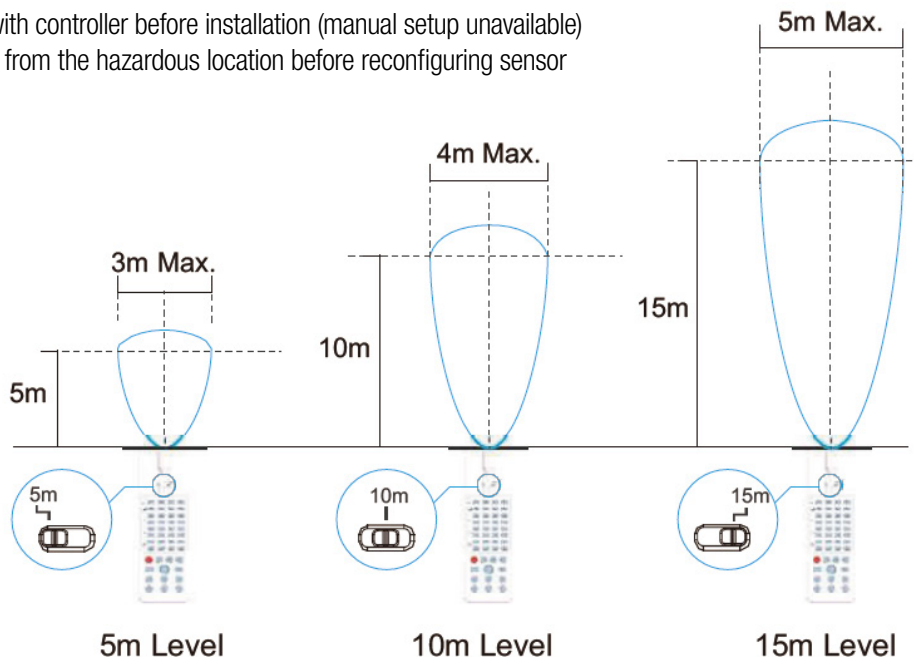










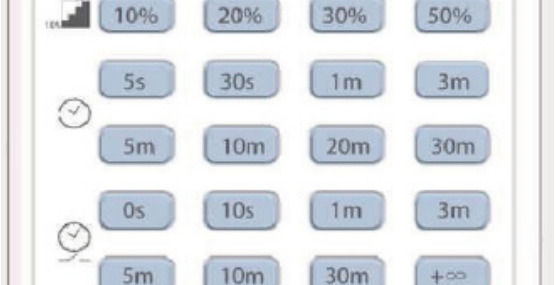




Reducer 1_2NPT/1_2NPT
Material: SUS304
Weight: 0.554kg

Remote Control

- Do **NOT** use/leave remote controller in hazardous locations
- Configure sensor with controller before installation (manual setup unavailable)
- Remove the fixture from the hazardous location before reconfiguring sensor



REMOTE CONTROL SETTING	BUTTON	REFERENCE																												
		Press the "ON/OFF" button; the light goes to constant on/off mode, sensor is disabled. Press "Reset" button to quit from this mode and the sensor starts to work.																												
		Press the "Reset" button; all parameters are the same as factory settings.																												
		Press the "Sensor motion" button; the light turns on from the normal on/off mode, and the sensor starts to work. (The latest setting stays in valid.)																												
		Press the "DIM Test" button, the 0-10V dimming works to test whether the 1-10Vdc dimming ports are connected properly. After 2s, it returns to the latest setting automatically.																												
		Long Press, 3 seconds "Override DH" button to exit the Daylight priority mode or Daylight harvesting mode and then enter the Daylight Sensor mode. (The latest setting stays in valid.)																												
		Short-press the "DIM+/DIM-" button to set the occupancy light level; the brightness of the load light adjusts at 2% per unit. Long-press "DIM+/DIM-" button to set the occupancy light level. The brightness of the load light adjusts at 1% per unit. Dimming range: 10%-100%. (Applies to normal ON mode and sensor with daylight harvesting function.)																												
		Long Press, 3 seconds to enter the Daylight priority function or Daylight harvesting function. Note: Short press "Disable" button will exit the Daylight priority mode and the Daylight Sensor is uncontrolled.																												
		<table border="1" data-bbox="893 850 1412 997"> <thead> <tr> <th>Scene Options</th> <th>Detection Area</th> <th>Hold Time</th> <th>Standby Period</th> <th>Standby DIM Level</th> <th>Daylight Sensor</th> <th>Induction Way</th> </tr> </thead> <tbody> <tr> <td>QS1</td> <td>100%</td> <td>5min</td> <td>10min</td> <td>10%</td> <td>30lux</td> <td>HS</td> </tr> <tr> <td>QS2</td> <td>100%</td> <td>10min</td> <td>30min</td> <td>10%</td> <td>Disable</td> <td>HS</td> </tr> <tr> <td>QS3</td> <td>100%</td> <td>15min</td> <td>30min</td> <td>10%</td> <td>Disable</td> <td>HS</td> </tr> </tbody> </table> <p>Note: The sensor parameters can be adjusted by pressing the corresponding button. When the user presses any button to change the sensor parameters, the last setting prevails. If the sensor doesn't have the function of the above parameters, that parameter is invalid. (Stand-by period and Stand-by DIM Level do not apply to ON-OFF Sensor. Induction way does not apply to a low-mount sensor.)</p>	Scene Options	Detection Area	Hold Time	Standby Period	Standby DIM Level	Daylight Sensor	Induction Way	QS1	100%	5min	10min	10%	30lux	HS	QS2	100%	10min	30min	10%	Disable	HS	QS3	100%	15min	30min	10%	Disable	HS
Scene Options	Detection Area	Hold Time	Standby Period	Standby DIM Level	Daylight Sensor	Induction Way																								
QS1	100%	5min	10min	10%	30lux	HS																								
QS2	100%	10min	30min	10%	Disable	HS																								
QS3	100%	15min	30min	10%	Disable	HS																								
		Press the "TEST 2s" button to enter the test mode anytime. In test mode, the sensor parameters are as follows: Detection Area is 100%, Hold Time is 2s, Stand-by Dim Level is 10%, Standby Period is 0s, Daylight sensor is disabled. This function is only for testing. Quit the test mode by pressing "RESET" or any other function buttons. This mode has no memory function. After powering on again, the parameters are restored to the last setting. <p>Note: If the sensor has the wireless networking function, the button provides the function to enter the distribution network mode.</p>																												
		Press the "HS" button to set the detection area to high sensitivity. Press the "LS" button to set the detection area to low sensitivity. The Induction mode is adjusted at the detection area setting. <p>Note: This button is invalid for a low-mount sensor.</p>																												
		Daylight Sensor Set up Daylight Sensor: 5Lux/15Lux/30Lux/50Lux/100Lux/150Lux/Disable																												
		Standby period Set up Standby period: 0s/10s/1min/3min/5min/10min/30min/+∞ Note: Standby period does not apply to ON-OFF Sensor.																												
		Hold time Set up Hold time: 5s/30s/1min/3min/5min/10min/20min/30min																												
		Standby DIM level Set up standby DIM level: 10%/20%/30%/50% Note: Standby DIM Level does not apply to ON-OFF Sensor.																												
		Detection Area Set up Detection Area: 25%/50%/75%/100%																												
		Remote Distance The toggle button can set the remote distance of the remote control and sensor.																												